


- Top Oven**
- 1. Control panel
  - 2. Top oven cooling fan\* (not visible)
  - 3. Top oven light
  - 4. Top oven grill heating element
  - 5. Top oven bottom heating element (not visible)
  - 6. Top oven door hinges
  - 7. Top oven door
- Lower Oven:**
- 8. Lower oven cooling fan
  - 9. Lower oven light
  - 10. Lower oven round heating element (not visible)
  - 11. Cavity fan (not visible)
  - 12. Lower oven door hinges
  - 13. Lower oven cool door
- \*N.B.:** The lower oven cooling fan switches on only when the oven has reached a certain temperature. The top oven cooling fan start immediately. After the oven switches off, the cooling fans may, however, continue to run for a certain time to ensure proper cooling.

ACCESSORIES

- Grid
- Grill pan set

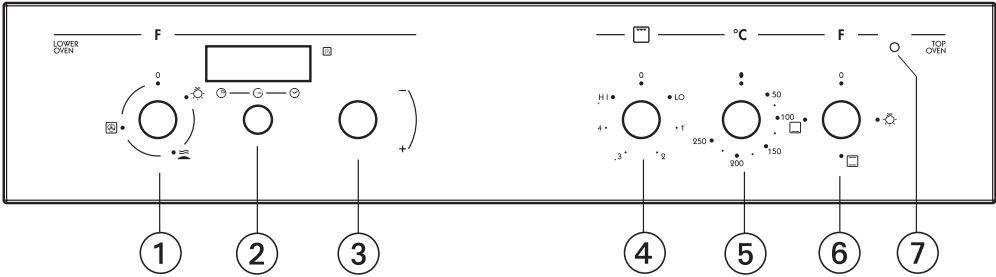

- Lower Oven:**
- 1. ON/OFF - Function Selector Knob.
  - 2. Confirm and programme selection button
  - 3. Pre-set values changing knob (temperature, time, levels)
- Top Oven:**
- 4. Grill knob ON/OFF and grilling power
  - 5. Thermostat knob
  - 6. Function Selector Knob.
  - 7. Thermostat light. Turns off when oven reaches the set temperature.






- Retractable knobs:**
- To use this type of knob, press it in the middle.
  - The knob comes out.
  - Turn it to the required position.
- Once cooking is over, turn the knob to 0 and press it again to restore it to its original position.

LOWER OVEN FUNCTIONS TABLE				
Function	Preset temperature	Adjustable temperature	Description of function	
0 Oven OFF	-	-		
LAMP	-	-	To switch on the oven light.	
MLTF -HEAT MAINTENANCE	35°C - 60°C	35°C - 60°C	<ul style="list-style-type: none"><li>• MLTF -35°C Rising is with the lamp off, to maintain a uniform temperature in the oven.</li><li>• Heat maintenance-60°C</li><li>• To maintain a uniform temperature of 60°C</li></ul>	
FAN/THERMO-VENTILATED	160°C	50°C - 250°C	<ul style="list-style-type: none"><li>• To cook (without preheating) foods that require the same cooking temperature on one or more shelves.</li></ul>	
Extra function	Preset temperature	Adjustable temperature	Description of function	
FOOD WARMER	60°C	-	<ul style="list-style-type: none"><li>• This function maintains an oven temperature of 60°C at the end of the cooking cycle when the oven is on automatic function.</li></ul>	





TOP OVEN FUNCTIONS TABLE	
Function	Description of function
0 Oven OFF	-
LAMP	To switch on the oven light.
STATIC	<ul style="list-style-type: none"><li>• To cook meat, fish and poultry in the oven.</li></ul>
BOTTOM HEATING ELEMENT	<ul style="list-style-type: none"><li>• To finish cooking fruit or cheese cakes or to thicken sauce.</li></ul>
SINGLE GRILL	<ul style="list-style-type: none"><li>• To cook meat (smoked bacon, steaks, sausages, etc.) and to make toast.</li><li>• Turn the food during grilling.</li></ul>






- STARTING THE LOWER OVEN:** When the oven is connected to the power supply for the first time, or re- connected after a power failure, the display shows “SELP”.
- To start the oven:
- turn knob 1 to “0”.
  - press button 2.
- The display shows “---:--”.
- USING THE LOWER OVEN:**
- Please refer to the separate instructions for use of the electronic programmer
- USING THE TOP OVEN:**
- Grill Function:**
- Grill** : turn the grill knob (4) to the required grilling position.
- Oven Light** : turn the function selector knob (6) to the required position.
- Static** and **Bottom heating** function:
- 1. Turn the function selector knob (6) to the required position.
  - 2. Turn the thermostat knob (5) to the required temperature.

LOWER OVEN FOOD COOKING TABLES

FOOD	Function	Preheating	Shelf (from the bottom)	Temperature (°C)	Cooking time (min. approx.)
MEAT Lamb, Kid, Mutton (kg. 1)		-	2	190	75 - 95
Roast (Veal, Pork, Beef) (kg. 1)		-	2	190	70 - 90
Chicken, Rabbit, Duck		-	2	190	60 - 80
Turkey (kg. 6) + level. 3 browning		-	1	190	170 - 180
Goose (2 Kg)		-	2	190	90 - 110
FISH (WHOLE) (1-2 kg) Gilt-head, Bass, Tuna, Salmon, Trout		-	2	190	40 - 60
VEGETABLES Stuffed tomatos/peppers		-	2	200	50 - 60
Baked potatoes		-	2	190	45 - 50
Raw vegetables au gratin (e.g. Fennel, Cabbage, Asparagus, Celery)		-	2	200	50 - 60
SWEETS, PASTRIES, ETC. Raising cakes (sponges)		-	3	160	35 - 45
Tarts		-	2	180	35 - 45
Rich fruit cake		-	2	160	100 - 110
Biscuits		-	1 - 3	160	25 - 35
Cream puffs		-	1 - 3	180	40 - 50
Savoury Pies		-	3	190	45 - 55
Lasagne		-	2	200	45 - 55
Meringues		-	1 - 3	80	150 - 180
Vol-au-vents		X	1 - 3	200	20 - 25

TOP OVEN FOOD COOKING TABLES

FOOD	Function	Preheating	Shelf (from the bottom)	Temperature (°C)	Cooking Time (min. approx.)
Scones		X	1	200	20-25
Victoria Sandwich cake		X	1	170	20-30
Small cakes		X	1	160	20-30
Rich fruit cake		X	1	150	100-110

FOOD	Function	Preheating (5 minutes)	Shelf (from the bottom)	Power level	Cooking Time (min. approx.)
Toasts		X	2 Pan set	4	1-3
Pork chops		X	1/2 Pan set	4	30-35
Spits		X	1/2 Pan set	4	35-40
Bacon rasher		X	1/2 Pan set	4	5-10
Sausages		X	1/2 Pan set	4	15-20

N.B.: Cooking times and temperatures are given merely as a guide.

# **INSTRUCTIONS FOR USE**

## **SAFEGUARDING THE ENVIRONMENT**

## **IMPORTANT NOTES**

## **BEFORE USING THE OVEN**

## **INSTALLATION**

## **OVEN ACCESSORIES**

## **BOTTOM OVEN FUNCTIONS**

## **TOP OVEN FUNCTIONS**

## **CARE AND MAINTENANCE**


## **TROUBLESHOOTING GUIDE**

## **AFTER SALES SERVICE**

To make the most of your new oven, read the user's instructions carefully and keep them on hand for consultation in the future.

## SAFEGUARDING THE ENVIRONMENT

### Disposal of packaging materials

- The packaging material is 100% recyclable and is marked with the recycle symbol .
- Packing materials should therefore not be thrown away with household rubbish but disposed of as directed by local authorities.




### Disposal of old appliances

This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE).

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.



The symbol  on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

### Energy saving

- Only pre-heat the ovens if specified in the cooking table of the Product Description Sheet or in your recipe.
- Use dark, black enamelled baking moulds as they absorb heat very well.

## IMPORTANT NOTES

### Warning:

- **Accessible parts will become hot when in use. To avoid burns and scalds children should be kept away.**
- **Not intended for use by unsupervised young children and infirm persons .**
- **Make sure young children are not allowed to play with the appliance.**
- This oven is designed solely for use as a household appliance for cooking food. Any other use is prohibited. The manufacturer declines all liability for damage caused by improper or incorrect use.
- Any repairs or servicing must be carried out exclusively by a qualified technician.
- Never expose the oven to atmospheric agents.
- Do not put heavy objects on the doors because they could damage the oven cavities and hinges. Do not cling to the doors.
- Never hang anything heavy on the oven door handles.
- **Do not cover the bottom of the ovens with aluminium foil or other objects.**
- The oven doors must close properly. The door seals must be kept clean.
- Do not pour water directly into the inside of a hot oven. This could damage the enamel coating .
- Fruit juice drippings from the baking tray may leave permanent stains. We recommend the ovens be cleaned before being used again.
- Never drag pots and pans across the bottom of the ovens as this could scratch the coating.
- Residual condensation from cooking could damage the ovens and surrounding kitchen units over time. We recommend that you:
  - set the lowest temperature;
  - cover food;
  - do not store food in the oven;
  - dry any wet parts when the oven is cool.
- The front panel and the handle of the oven doors heat up when the appliance is switched on for a long time at high temperatures.
- Never touch the oven with any wet part of the body and do not operate it with bare feet.
- Do not pull the appliance or the power supply cable to disconnect them from the electrical supply.
- **Keep children away from the following elements as they are sources of danger:**
  - The oven and its controls, especially when in operation and immediately afterwards to avoid injury.
  - Packaging (bags, polystyrene, metal parts, etc.).
  - An oven to be scrapped.

- Make sure that the electrical cables of other appliances used near the oven do not touch hot parts and are not trapped in the oven doors.
  - Some oven models are equipped with an air cooling system to prevent the front of the oven and cabinet cavity from reaching excessively high temperatures.
- Attention:** Steam and smoke are vented through two openings located between the control panel and the top oven door and between the two doors. Do not obstruct the vent openings.
- Do not place inflammable material in the ovens or nearby: a fire may break out if the appliance is inadvertently switched on.
  - Use oven gloves to remove pans and accessories, when the ovens are hot.
  - **During cooking steam will form in the oven cavity. Please take special care when opening the door.**
  - If alcoholic beverages are added when roasting or cooking cakes and sweets (for example, rum, cognac, wine, etc.) bear in mind that alcohol evaporates at high temperatures. Vapours released by the alcohol can catch fire upon coming into contact with the electric heating element.
  - Do not heat sealed containers in the ovens (except for packages specifically designed for this purpose; see the manufacturer's instructions). The pressure that develops inside the packaging might cause it to explode, damaging the appliance.
  - Do not use containers made of synthetic material for cooking (except for packages specifically designed for this purpose; see the manufacturer's instructions). They could melt at high temperatures.
  - Keep an eye on the oven if you are using a lot of fat or oil. Oil and fat can overheat and catch fire!
  - Never pull out fully loaded shelves. Use extreme caution.

## BEFORE USING THE OVEN

- Remove the accessories from the ovens and heat them 200°C for about an hour to eliminate the smell of the protective grease and insulating materials. Keep the kitchen window open during this operation.
- Before using the oven, remove:
  - Stickers on the front and oven doors, except for the rating plate;
  - protective cardboard and protective plastic film from the front panel controls and other parts of the appliance;
  - any sticky labels from the accessories (for example, under the drip tray).

## INSTALLATION

### Technical information for the installer

After removing the oven from its packaging, before making the connections place it on the polystyrene foam base to protect it from damage.

Oven installation requires two people. Do not attempt to lift the oven by the door handle. Lift by means of the handles on the side of the oven.

Check that the appliance has not been damaged in transit.

Oven dimensions and kitchen unit dimensions are shown in the figure opposite.

Any adjacent kitchen units must be heat resistant (80° C min).

If plastic laminates or cement are not sufficiently heat-resistant, warping, bubbling or detachment of the finish may result.

Install the oven in the housing, lifting it by the sides, taking care not to trap the wires of the power supply cable.

**For correct ventilation, observe the ventilation opening directions shown in the figure (500 min x 80 mm and 500 min x 50 mm inside the cabinet).**

Secure the oven to the kitchen unit with screws (A) as shown.

During oven installation, care must be taken to ensure that the sides do not touch the front edges of the housing or adjacent drawers and doors (see picture).

- **Important: do not connect to the power supply until you have finished connecting the oven and cooktop.**
- **Make sure the appliance is installed and connected to the power supply by a qualified technician in accordance with the manufacturer's instructions and in compliance with local regulations.**
- **The installer is responsible for the correct electrical connection of the appliances and the observance of the relative safety recommendations.**
- **The appliance must be connected to the power supply by means of an all-pole disconnect switch with minimum contact gap of 3 mm.**
- **The law requires that the appliance be earthed.**
- **Do not use multiple plug adapters or extension leads.**
- **After the oven has been installed, the electrical components must be concealed.**

**Make sure that the voltage shown on the rating plate is the same as the domestic power supply voltage.**


**The rating plate is on the front edge of the oven cavity (visible with oven door open).**

### For Australia only:

The oven is delivered without supply cord. Use a supply cord type H05 RR-F, 3X2,5 mm<sup>2</sup> min.



Fumes vent

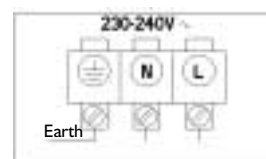

## OVEN ACCESSORIES

**Accessories supplied depend on the model. The accessories provided with the oven are listed in the Product Description Sheet provided separately (under Accessories).**

### Drip tray (1)

The drip tray is designed to collect fat and food particles when it is positioned under the grid or as a plate, such as when cooking meat, chicken and fish with or without vegetables. Pour a little water into the drip tray to prevent spatters of fat and smoke.

### Baking tray (2)

For cooking biscuits, cakes and pizzas.

### Grid (3)

The grid can be used to grill food or as a support for baking trays, cake tins and other cooking receptacles. It can be placed on any of the runners in the ovens. The grid can be inserted with its curved side facing upwards or downwards.

### Grid (3a) for Australia only

The grid rear tray guard must be positioned up-right and to the rear of the oven. Follow the arrow indication when inserting in the oven.

### Side catalytic panels (4)

The catalytic panels have a special microporous enamel coating that absorbs fat spatters. We recommend an automatic cleaning cycle after cooking particularly fatty food (see "Care and Maintenance").

### Meat tray (5)

Position the meat tray above the drip tray with the opening positioned towards the door.

Pour some water on the drip tray which can be used from time to time to pour on the meat.

### Kit "Grill Pan Set" (6)

The set comprises a grid (6a), an enamel drip tray (6b) and one handle (6c).


This set must be placed on the grid (3) and used with the Grill function.




1



2

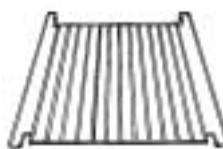


3

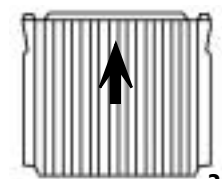

3a



4

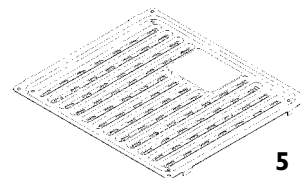

5



6a

6b

6c

6

## BOTTOM OVEN FUNCTIONS

The functions actually available depend on the model (see the Product Description Sheet supplied separately).

### MLTF (Heat Maintenance)

This function maintains a uniform temperature inside the oven.

The default setting is **35°C**.

For this function it is advisable to use the lower shelf level.

**35°C**: to allow dough for bread and pizza to rise.






**60°C**: to keep food warm once it is cooked.

It is advisable to use the lower shelf.

### STATIC

To cook meat, fish and poultry in the oven.

The function allows temperature control; the temperature can be set in the range of **50°C** to **250°C**. The default setting is **200°C**.

Preheat the oven to the required cooking temperature and place the food inside as soon as all the indicators of the thermometer      are alight and an acoustic signal sounds.

It is advisable to use the second or third shelf from the bottom.

### PASTRY/FAN

To cook on max. two shelves.

The function allows temperature control; the temperature can be set in the range of **50°C** to **250°C**. The default setting is **175°C**.

If necessary, switch the position of the dishes in the oven during cooking for optimum cooking performance.

### GRILL

Use the grill function to cook sirloin steaks, kebabs, sausages, vegetables au gratin and for making toast. This function allows 4 slight adjustments which progressively increase heat output (position **1**, **2**, **3**, **4**) plus a maximum heat setting (position **5**).

The default position is (**3**).

Preheat the oven for 5 min. with the door closed. For best results, leave the oven door open when grilling. Arrange food on the wire shelf. When cooking meat, to avoid spatters of fat and smoke, pour a little water into the drip tray.

**It is advisable to turn the food during cooking. When using the top oven grill function with the door open, the bottom door must remain closed.**

### TURBOGRILL

This function is ideal for cooking large pieces of meat (roast beef, roast joints).

The function allows various settings (1 min. - 5 max.).

Preheat the oven for 3/5 min.

During cooking the door must remain closed.

When cooking meat, to avoid spatters of fat and smoke, pour a little water into the drip tray.

It is advisable to turn the food during cooking.

### FAN/THERMO-VENTILATED

To cook (without preheating) foods that require the same cooking temperature on one or more shelves (e.g.: fish, vegetables, sweets), without transferring odours from one foodstuff to the other.

This function allows temperature control; the temperature can be set in the range **50°C** to **250°C**.

The default setting is **160°C**.

### TURBOFAN

To cook on one shelf (e.g.: fruit, cakes, timbales, vegetables, pizza, poultry).

This function allows temperature control; the temperature can be set in the range **50°C** to **250°C**.

The default setting is **160°C**.

### PIZZA/BREAD

To bake pizza, bread, focaccia.

The function provides **2** cooking programs (**P1**, **P2**) with preset initial temperatures that can be adjusted with 5°C steps by the user.

The default setting is **P1**.

You will find a recipe for each programme in the recipe book provided.

Programme	Preheating (adjustable)	Cooking (not adjustable)
P1	max 300	240
	min 250	190
P2	max 220	200
	min 200	180

To save energy, when the oven is already warm, it will automatically reach the set cooking temperature without preheating.

### BOOSTER

To preheat the oven rapidly.

The booster function cuts out automatically when the programmed temperature is reached. The acoustic signal will sound and the appliance switches to the **STATIC** cooking function.

This function allows temperature control; the temperature can be set in the range **50°C** to **250°C**.

The default setting is **200°C**.



## TOP OVEN FUNCTIONS

The functions actually available depend on the model (see the **Product Description Sheet** supplied separately).

### STATIC

Use when all the food is on the same shelf. Preheat the oven to the required cooking temperature and place the food inside as soon as thermostat indicator light switches off. Ideally, the shelf should be on the second shelf from the bottom when using the static function.

### BOTTOM HEATING ELEMENT

To finish cooking fruit or cheese cakes or to thicken sauce. Use this function for the last 10/15 minutes of cooking time.

### GRILL

These functions are ideal for grilling meat (bacon, sausages, steak) and for toasting bread. Before use, preheat the grill for 5 minutes approx. Pour some water into the drip tray to reduce smoke and grease spatters and position it into the oven. Place food on the meat tray or grid. Turn the meat over about half-way through cooking time. During cooking leave the oven door open.

### SINGLE VARIABLE GRILL

The power can be set according to the positions available. Use this function to grill small pieces of meat (steaks, sausages) and for making toasts.

### DUAL VARIABLE GRILL

The power can be set according to the positions available. Use this function to grill large quantities of food and toast.

## CARE AND MAINTENANCE

**Important:** Do not use water pressure cleaners or steam cleaners.

**When you finish cooking; wait for the oven to cool and then clean it to prevent the build-up of baked-on residues.**

### Exterior of the oven

- Clean with a damp cloth. If it is very dirty, add a few drops of washing up detergent to the water. Wipe with a dry cloth.
- Do not use corrosive or abrasive detergents, which dull the surface.  
In the event one of these products comes into contact with the oven, immediately clean it using a damp cloth.
- Slight differences in colour on the front of the appliance are determined by the different materials used, such as glass, plastic and metal.

### Ovens with aluminium front panel

- Clean using a mild detergent and a soft window cleaning cloth or a microfibre cloth that does not leave fibres on the surface. Wipe horizontally, without exerting pressure.
- Do not use corrosive products, hard sponges or rough cloths. Clean the aluminium surfaces with a dry cloth.

### Accessories

- Soak the accessories in water with washing up detergent immediately after use. Food residues can be easily removed using a brush or sponge.

### Oven cavity

- Do not use abrasive cleaners or pan scourers. Use special oven cleaners and follow the manufacturer's instructions.
- After every use, wait for the oven to cool then clean it to prevent the build-up of baked-on food residues.
- With long cooking times or when cooking on several shelves, especially food with a high water content (pizzas, stuffed vegetables, etc.) condensation may form on the inside of the door and the seal. When the oven is cool, dry the inside of the door with a cloth or sponge.
- Clean the glass of the door with a suitable liquid detergent.
- The oven door may be removed to facilitate cleaning. To clean the upper part of the oven the grill heating element can be lowered (only on some models).

### Self-cleaning catalytic side panels and rear cavity (if provided) - Cleaning cycle

- Heat the oven to 200° C when empty and maintain this temperature for about an hour.
- At the end of the cycle and when the oven has cooled, use a damp sponge to remove any food residues.
- **Never clean the self-cleaning catalytic panels and rear cavity with abrasive products, rough brushes, pan scourers, or oven cleaner sprays, as they will lose their automatic cleaning properties.**

**Attention:** When carrying out the following operations it is advisable to wear protective gloves. These instructions should be followed carefully both to prevent injury and in order to avoid damaging the oven door or hinges.

#### How to remove the oven door:

1. Open the oven door fully (see fig. 1).
2. Lift the two catches and push them forwards as far as they go (see fig. 2).
3. Remove the door by closing it partially and lifting it upwards (see fig. 3).

#### To refit the door:

1. Insert the hinges into their grooves and lower the door fully.
2. Lower the two catches.
3. Close the oven door fully.

**Attention:** These instructions should be followed carefully both to prevent injury and in order to avoid damaging the oven door or hinges.

#### Lowering the top oven grill element to clean the oven roof Lowering the bottom oven grill element to clean the oven roof (depending on the model)

- Do not attempt to clean the oven until it is cool.
1. To clean the oven roof, pull out the grill element and lower it as far as it will go.
  2. Clean the oven roof and then return the grill element to its original position.

#### HOW TO REPLACE THE OVEN LAMP

1. Switch off electricity at the mains.
2. Unscrew the lamp cover.
3. Replace the bulb.
4. Refit the lamp cover.
5. Switch on the power again at the mains.

#### Note:

Use only a replacement bulb of 25 Watts 230 V, Type E-14, T300°C, available from our After Sales Service.

**Important:** Do not use the oven until the lamp cover has been repositioned.




## TROUBLESHOOTING GUIDE

### Oven not working:

- Check there is mains power and that the oven is connected to the power supply.
- Switch the oven off and then back on again to see if the fault persists.

### IMPORTANT:

- Check that the oven control knob is not turned to "0" or to the "lamp" symbol .
  - If the electronic programmer (depending on model) display presents the message "5LPP", press the button **2** to reset the oven and then set the clock (see the Programmer Description Sheet supplied separately).
  - If the electronic programmer (depending on the model) presents the message "F XX", contact the nearest After Sales Service. Specify in this case the number that follows the letter "F".
  - Check that the mechanical programmer (if provided) is turned to "manual".

## AFTER SALES SERVICE

### Before contacting After Sales Service:

1. Try to solve the problem yourself following the points described in "Troubleshooting Guide".
2. Switch the appliance off and then back on again to see if the fault persists.

**If after the above checks the oven or cooktop are still not working properly, contact the nearest After Sales Service.**

Please give:

- A short description of the fault;
- the oven type and model;
- the service number (number after the word Service on the rating plate), located on the right hand edge of the oven cavity (visible when the oven door is open). The service number is also indicated on the guarantee booklet;
- your full address;
- your phone number.

**SERVICE** 0000 000 00000



In the event the oven must be repaired, contact an **authorised After Sales Service**, (use of original replacement parts and proper repair is guaranteed).

**Failure to comply with these instructions may compromise the safety and quality of the product.**

### DECLARATION OF CONFORMITY

- These appliances are intended to come into contact with foodstuffs and they are constructed in compliance with Directive 89/109/EEC.
- This appliance is designed to be used for cooking only.  
**Any other use (for example, for room heating) is considered as improper use and potentially dangerous.**
- The appliance was designed, manufactured and sold in compliance with:
  - The safety requirements of "Low Voltage" Directive 73/23/EEC;
  - the protection requirements of EMC Directive 89/336/EEC
  - the requirements of Directive 93/68/EEC.